



### 7-4-1 'PRIORITY OPERATION' PROGRAMMING

Again, there are two methods of programming the Priority operation. Choose either one of the two programming methods depending on whether the radio is equipped with Tone Squelch/5-Tone or not.


#### Method (A) (for Tone Squelch or 5-Tone equipped radio)

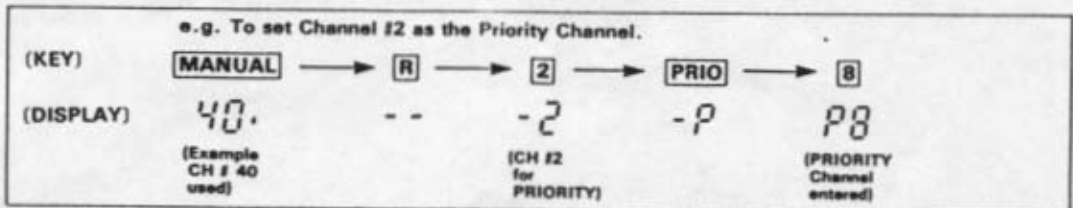

#### Method (B) (for radios NOT equipped with Tone Squelch or 5-Tone)

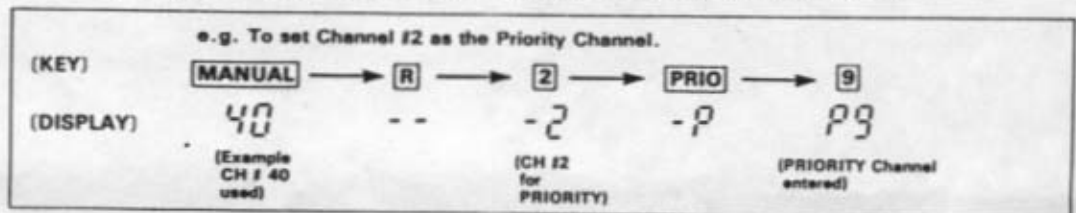


#### To Delete the Priority Channel

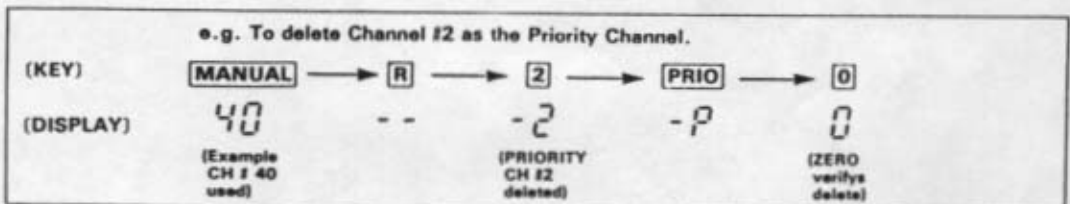


### 7-4-2 'PRIORITY' OPERATION

In Priority operation, any one of the 99 channels can be programmed as the 'PRIORITY' channel and can be selected by the simple keying step below. The Priority channel can be deleted or reprogrammed at any time. The Priority channel previously programmed is automatically deleted if a new priority channel is programmed.

 The keying steps for Priority operation are as follows :-

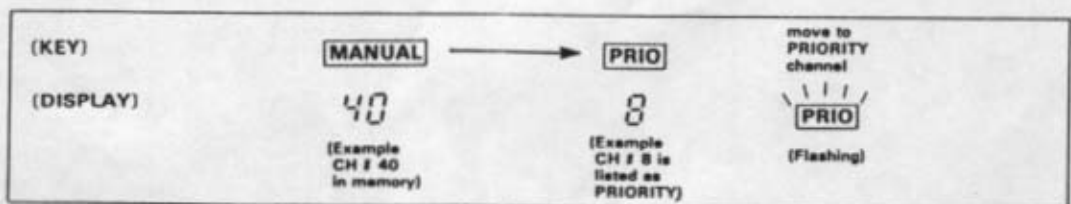

The  LED indicates the correct key entry. The radio now goes to the Priority channel. Push the **MANUAL** key to exit from Priority operation.

[NOTE 7] - Please understand that the Memory Scan function and the Priority function are different. The Memory scan function does not scan the 'PRIORITY' channel unless the channel is either listed as a MEMORY scan channel or the PRIORITY function is engaged.