
 


7-7 TONE CODE PROGRAMMING

To enter the Tone Code for the 5-Tone Seletcall or for the CTCSS encoder follow these keying steps as below :

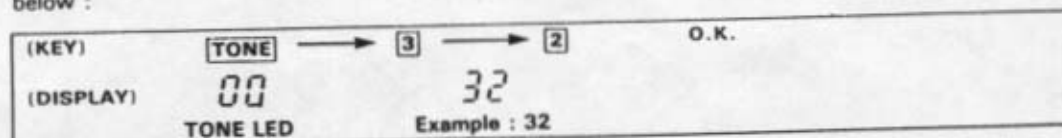

Always input a two digit code figure by adding the "0" key where required.



 
Tone code entry cannot be achieved without the 5-tone unit PCB or the CTCSS unit PCB being installed in the radio.

If you attempt to enter code figures without those options being fitted, you will receive the error message.


7-8 DIMMER PROGRAMMING

To save the battery current drain, the brightness of the LED used in the KG107 radio can be set to a reduced brightness level (dimmer function), except for the 3 seconds after any key operation.

To increase the brightness of the LEDs, push the keys as follow :



 
To decrease the brightness of the LED's, push the keys as follows :




Even with the dimmer function engaged, the LEDs will glow brightly for 3 seconds after any key is pressed before automatically reducing the brightness.

7-9 ZONE SHIFT PROGRAMMING

The ZONE function is provided to enable simple operation on repeater channels. To engage the ZONE function, enter the keys as follows :

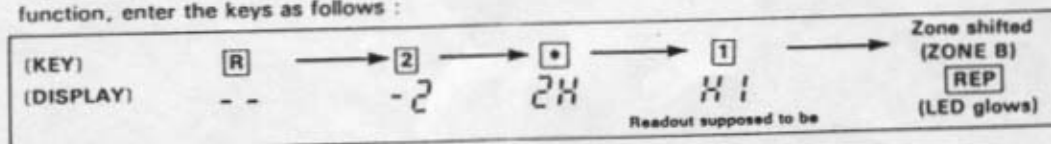

To release ZONE in origin.

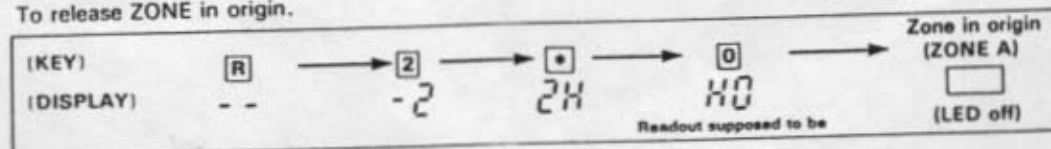

[NOTE 9] - In case that the frequency of ZONE B is not programmed in the EP-ROM, REP LED does not glow, and zone is not shifted.

<http://www.geocities.com/airwavesau/>