
MICROPHONE CONTROLS & FUNCTIONS

(10) PRESS-TO-TALK SWITCH [PTT SWITCH]

Press this PTT switch to engage the transmitter.

(11) RESET SWITCH

When the radio is fitted with 5-tone selecall, push this switch to set the radio to standby operation.

(12) CALL SWITCH

When the 5-tone selecall is installed, push this switch to transmit the 5-tone selecall codes.


(13) MONITOR SWITCH

This switch is located on the rear of the microphone. When the radio is equipped with the CTCSS or 5-Tone Unit, the functions may be manually disabled by placing this switch in the 'ON' position.

When operating in the MEMORY-SCAN operation, the scan function stops when this switch is placed in the 'ON' position. Scanning will recommence when this switch is returned to the 'OFF' position.

If you intend to use a particular channel (during scanning), then you **MUST** set this switch to the 'ON' position. You **CANNOT** transmit with this switch set at the 'OFF' position.

When the radio is equipped with CTCSS or 5-Tone Unit, set this switch to the 'ON' position and connect the microphone hanger to chassis ground.

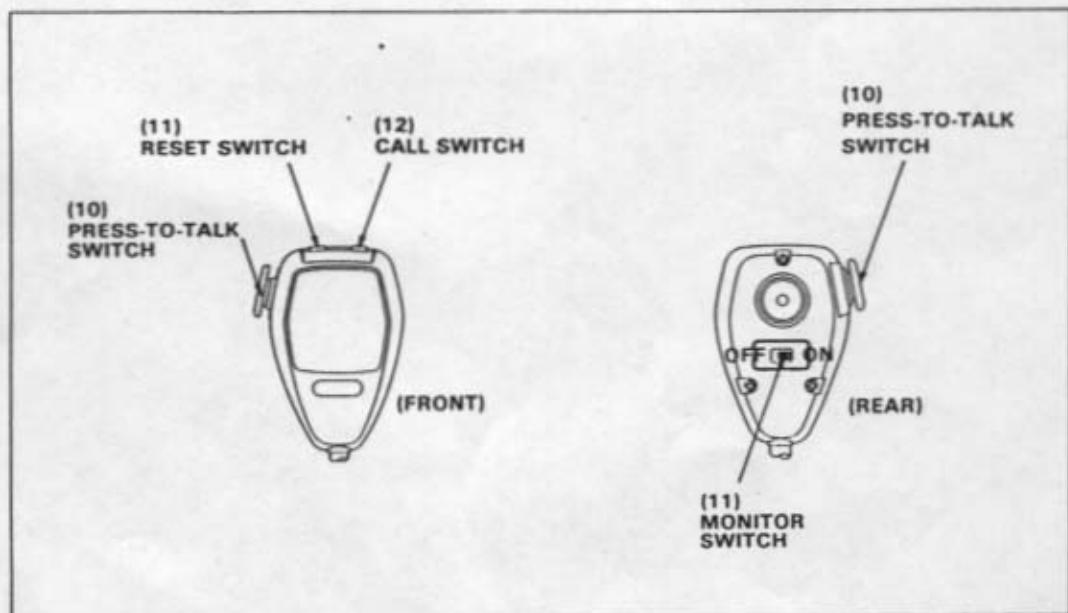

<http://www.geocities.com/airwavesau/>